

The Cuisinart logo is centered within a dark navy blue square. The word "Cuisinart" is written in a bold, white, sans-serif typeface. A registered trademark symbol (®) is positioned at the top right of the letter 't'.

**Cuisinart®**

**Electric Pepper Mill**

CPG130U



Congratulations on your purchase of your new Electric Pepper Mill.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment so that cooks at home as well as professional chefs have the tools to express their creativity.

All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day. That is why they have come to be regarded as the defining machines in their field by chefs across the world.

 
To learn more about new products we are launching, register for our free Cuisinart newsletter, simply visit our website [www.cuisinart.co.uk](http://www.cuisinart.co.uk) and refer to the club section.

Whatever you cook, cook it better with Cuisinart.

## Contents

<b>Product Description</b> . . . . .	5
<b>Safety Cautions.</b> . . . .	6
<b>Instructions for Use</b> . . . . .	9
A Filling the mill . . . . .	9
B Assembling the mill.. . . .	10
C Using the mill . . . . .	12
D Adjusting the grind setting . . . . .	12
E Changing the batteries.. . . .	13
<b>Cleaning &amp; Maintenance</b> . . . . .	14
<b>UK Guarantee</b> . . . . .	15
<b>UK After Sales Service</b> . . . . .	16

## Product Description

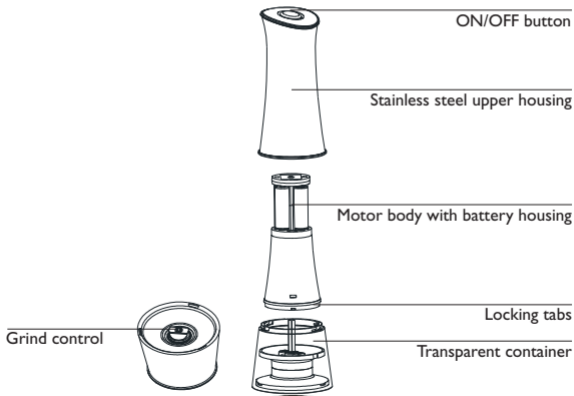

## Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.


Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

- Ensure all packaging materials and any promotional labels or stickers are removed from the Electric Pepper Mill before first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Helpline (see “UK After Sales Service” section).
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Do not use any accessories or attachments with this appliance other than those recommended by Cuisinart.

- Do not immerse the housing base in water or any other liquid or put it in a dishwasher.
- Do not place on a hot surface or near extreme heat.
- Do not place your fingers or any other object into the grinding mechanism.
- Do not touch or operate the Electric Pepper Mill with wet hands.
- Do not press the button for longer than 3 minutes.
- Store the mill in an upright position.
- For indoor use only.
- For domestic use only.
- This appliance should be used only for the preparation of food as described within the instructions for use that accompany it. Please retain these instructions for future reference.
- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- This appliance complies with the basic requirements of Directives 04/108/EEC (Electromagnetic Compatibility) and 06/95/EEC (Safety of domestic electrical appliances).

**WARNING:** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

The Cuisinart logo is displayed in white text on a dark blue square background.

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to an appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Make sure that batteries are removed from this appliance before it is disposed of. When the batteries have run down, they must be disposed of safely. Please take them to a recycling centre. If the batteries leak, do not touch them and take them to a recycling centre. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

## Instructions for Use

### A Filling the Mill

- Locate lock & unlock on the housing. Place one hand on the lower housing, then with the other hand carefully turn the upper housing anti-clockwise to the unlock position (see figure 1) and lift the housing upwards (see figure 2).

 


Figure 1

 


Figure 2

- Fill the transparent container with peppercorns or sea salt (see figure 3).

 


Figure 3

## **B Assembling the Mill**

- The battery compartment is located inside the stainless steel housing.
- Locate the lock and unlock on the housing and twist anti-clockwise to unlock. Pull to remove housing (see figure 4).

Figure 4



- Turn housing upside down to locate battery cage. Using the locking tabs follow the arrow, turn anti-clockwise and pull to release the battery cage (see figure 5).

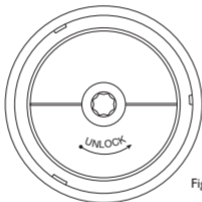 


Figure 5

- Insert 4x AA alkaline batteries, positive end first.  
**N.B** Alkaline batteries will ensure the best performance and longest life for your appliance. If you are not going to use the appliance for a long period of time or if the batteries have run down, remove the batteries from the unit.
- To reassemble, place housing over the top of the battery compartment, push down gently and turn clockwise until it locks into place.

## C Using the Mill

- The appliance is now ready to be used. Start the grinding process by pressing the on/off button on top of the product.

**N.B.** Should there be a gradual decline of pepper/salt output when using the appliance, there may not be enough peppercorns/salt in the transparent container or peppercorns/salt may be blocked in the mechanism. In this case, gently shake the mill to enable peppercorns/salt to fall down into the grinder.

## D Adjusting the grind

- The pepper mill can grind from very fine through to coarse.
- Turn the pepper mill upside down. Turn the grind control to regulate the fineness of the pepper or salt.
- Turn the control in a clockwise direction for fine pepper or salt and anti-clockwise for coarser pepper or salt (see figure 6).

 


Figure 6

## **E      Changing the batteries**

- We recommend the use of alkaline batteries for a longer life span.
- Do not leave flat batteries in the appliance.
- Remove the batteries when the appliance is not in use for an extended period of time.
- Always replace the 4 AA batteries at the same time.



## **Cleaning & Maintenance**

- Never immerse the appliance in water or any other liquid or place in a dishwasher.
- To clean, use a clean, dry cloth. Do not expose the appliance to moisture.
- Do not use detergents to clean it.
- Only wipe the outside with a soft, dry, dust free cloth.

## UK Guarantee

- This Cuisinart appliance is guaranteed for domestic consumer use for 5 years.
- The guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons.
- If the appliance does not perform satisfactorily due to defects of material or manufacture, it will be repaired or replaced by the manufacturer (see “UK After Sales Service” for details).
- This guarantee is only valid in the United Kingdom and Eire (includes Channel Islands and The Isle of Man).
- No responsibility will be accepted for any damage caused in transit.
- A charge may be made if goods are returned outside the relevant guarantee period or if the product is returned unnecessarily.
- The manufacturer reserves the right to amend terms and specifications without prior notice.
- This guarantee in no way affects your statutory rights.

The Cuisinart logo, featuring the brand name in white sans-serif font on a dark blue square background.

**Cuisinart®**

## **UK After Sales Service**

For further advice on using your Cuisinart Electric Pepper Mill and other products in the Cuisinart range, contact the Cuisinart Customer Care Line on 0870 240 6902 (09:00 to 17:00 hrs Monday to Friday) or alternatively, email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk).

### **In Guarantee**

Firstly, please call the Cuisinart Helpline 0870 240 6902.

Return the product to the Cuisinart Service Centre at the following address:

Cuisinart Service Centre  
P.O. Box 506  
WIGAN  
WNI 9AA

Enclose your name and address, together with proof of purchase and details of the fault. Cuisinart will either repair or replace the product, as appropriate.

**Out of Guarantee**

Contact the Cuisinart Customer Care Line on 0870 240 6902 (09:00 to 17:00 hrs Monday to Friday) or, alternatively, email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk) for details of the standard repair or replacement charge. If you wish to proceed with the repair or replacement, return the product to the Cuisinart Service Centre at the following address:

Cuisinart Service Centre  
P.O. Box 506  
WIGAN  
WNI 9AA

Enclose your name, address and contact number along with details of the fault.





**[www.cuisinart.co.uk](http://www.cuisinart.co.uk)**

**IB-9/007**